





# Thank You!

---

**You have successfully downloaded your document from Workbenchmagazine.com. Below are some tips for Trouble-Free Printing**

- 1)** Clear printer memory. If you are unable to print this document, turn off your printer for at least 15 seconds and try again.
  
- 2)** Print two or three pages at a time. If clearing the printer memory didn't help, try printing only two or three pages at one time, rather than sending the entire file
  
- 3)** If a document is required to be at an accurate scale set the page scaling option to "none" in your printer settings.
  
- 4)** Get advanced printer help. Visit Adobe Support for instructions in troubleshooting common printer problems.


<http://www.adobe.com/support/techdocs/316508.html>

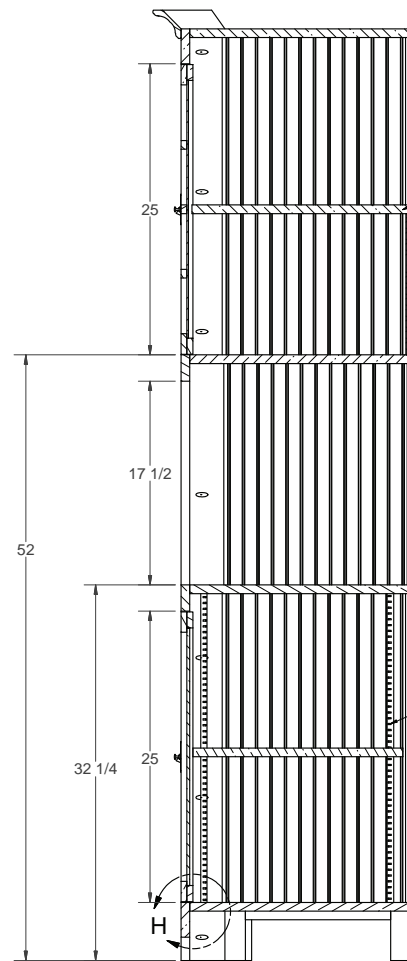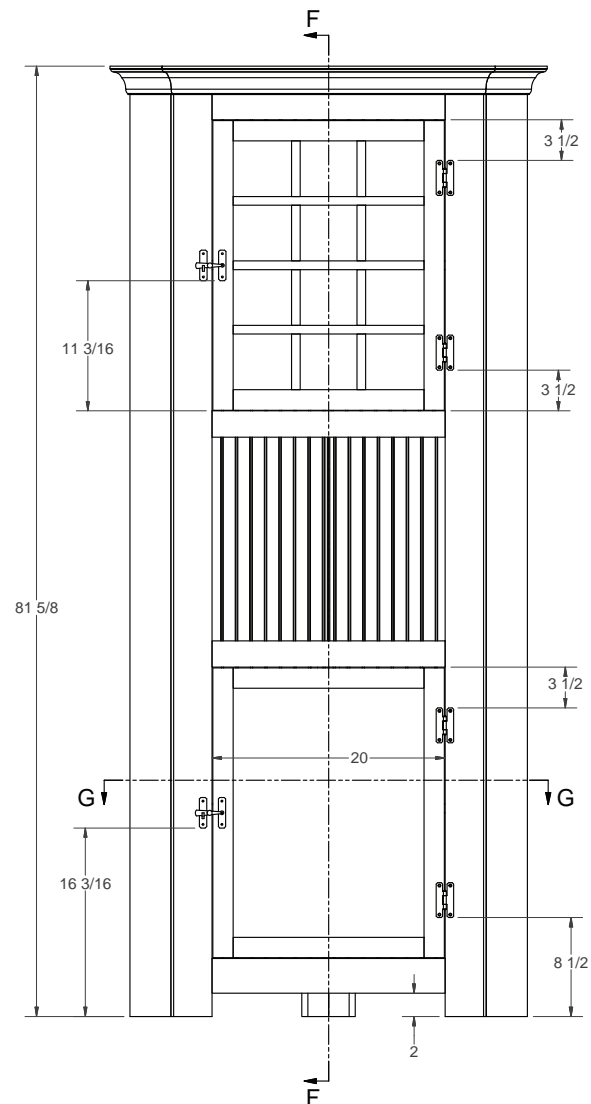


SECTION F-F

NOTE:  
SHELVES POCKET  
SCREWED TO WALL  
CLEATS.


NOTE:  
ADJ. SHELF ON  
METAL SHELF  
STANDARDS.

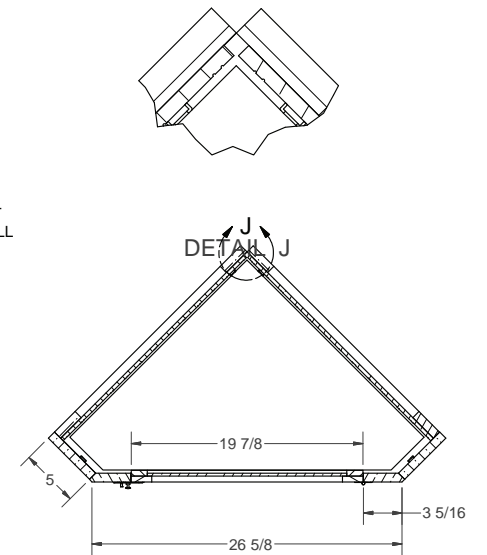

SECTION G-G

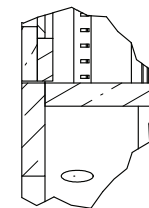


DETAIL H

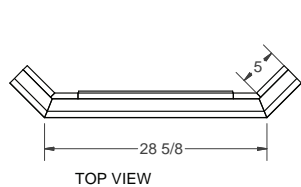

NOTE:  
CUT COVE MOLDING  
TO FIT.




NOTE:  
COVE ATTACHMENT




DETAIL F

NOTE:  
ORIGINAL BOARD  
WIDTH IS 3 3/4"  
BEFORE  
FINAL CUT.


NOTE:  
ALL STOCK 3/4"  
POPLAR.

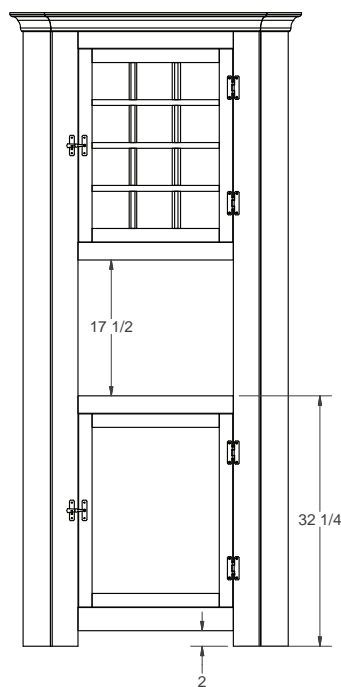


FACE FRAME




SIDE VIEW



SIDE LT




FRONT LT




TOP RAIL



MID RAIL




MID RAIL




BOTTOM RAIL




FRONT RT

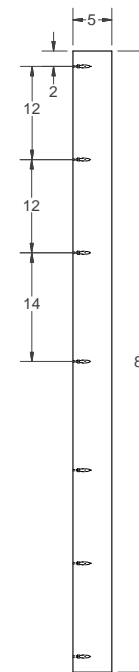

SIDE RT

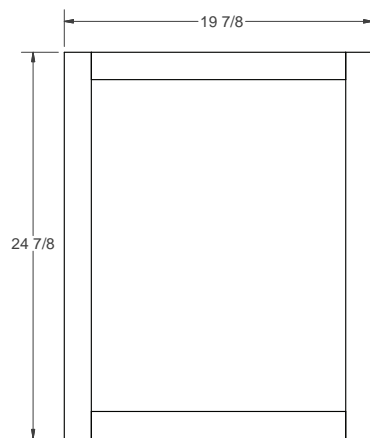


BOTTOM DOOR

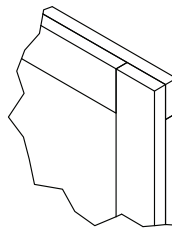


DETAIL B


NOTE:  
OVERLAP CORNER  
JOINTS AND  
GLUE PANEL IN PLACE.

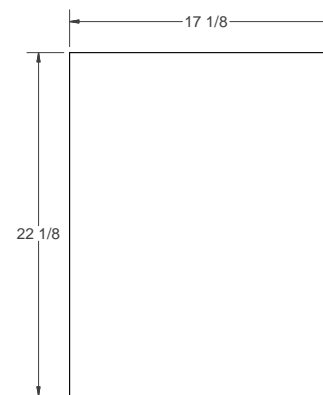

DOOR PANEL

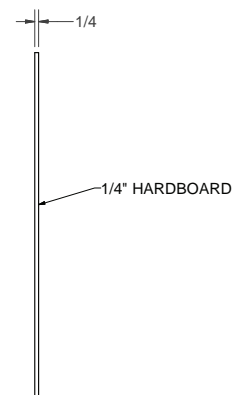


1/4" HARDBOARD




BTTM DOOR OUT RAIL


NOTE: ALL DOOR  
STOCK 1/2" THICK.




BTTM DOOR IN RAIL




BTTM DOOR OUT STILE

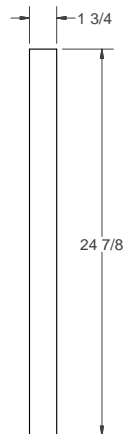


BTTM DOOR OUT STILE

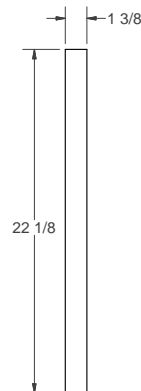


BTTM DOOR IN STILE

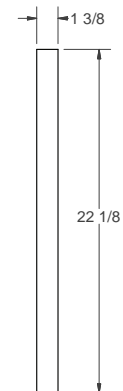


BTTM DOOR IN STILE






BTTM DOOR OUT RAIL



BTTM DOOR IN RAIL

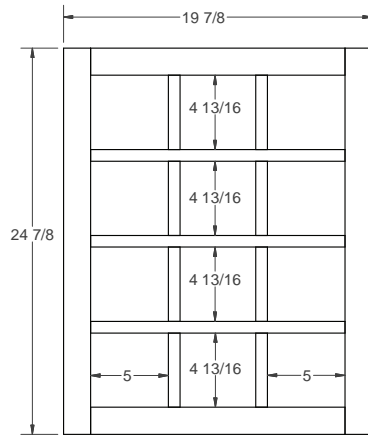


NOTE:  
CUT ALL MUNTINS  
TO FIT.  
TAPE IN PLACE  
WITH CLEAR  
AUTOMOTIVE TAPE.

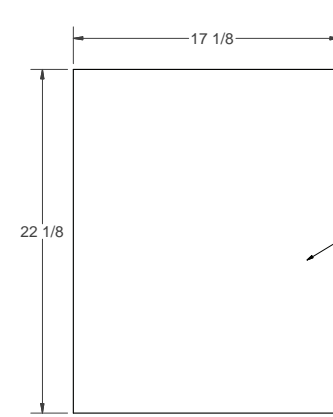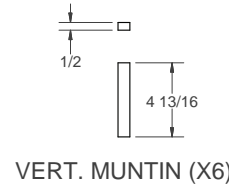



NOTE:  
INSTALL GLASS  
USING SPECED  
GLASS CLIPS.

NOTE:  
DOUBLE STRENGTH  
GLASS.

GLASS




UPPER DOOR OUTSIDE STILE

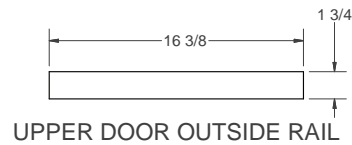


UPPER DOOR OUTSIDE STILE

NOTE: ALL DOOR  
STOCK 1/2" THICK.









UPPER DOOR IN STILE

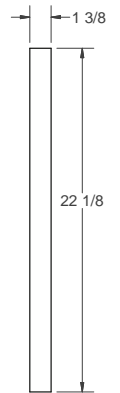


UPPER DOOR IN STILE




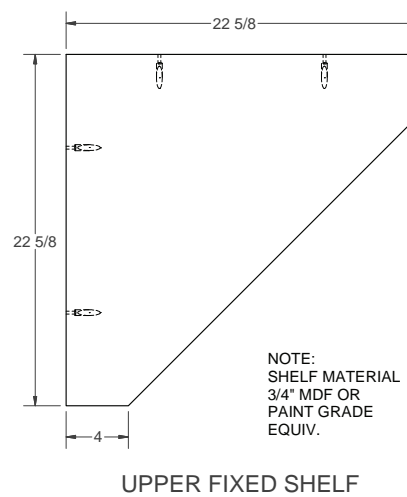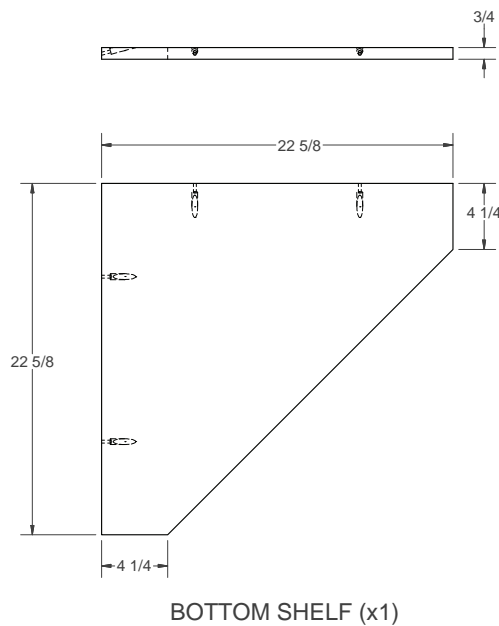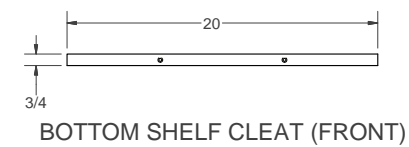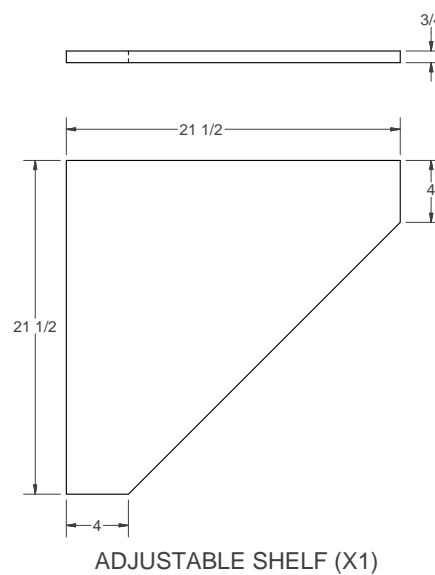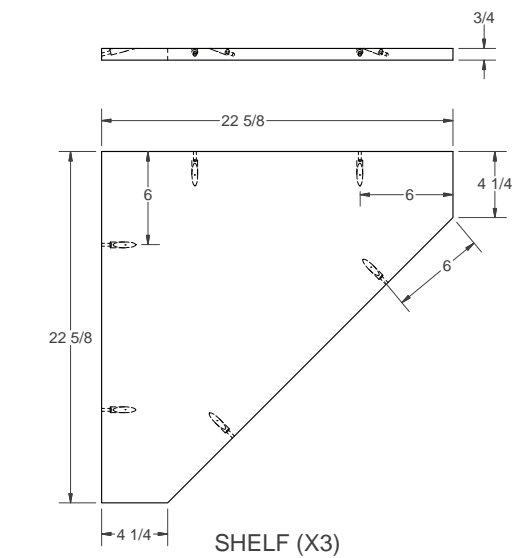


NOTE:  
SHELF MATERIAL  
3/4" MDF OR  
PAINT GRADE  
EQUIV.

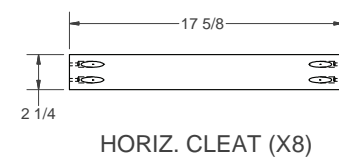


NOTE:  
SCREW CLEATS  
TO WALL STUDS.

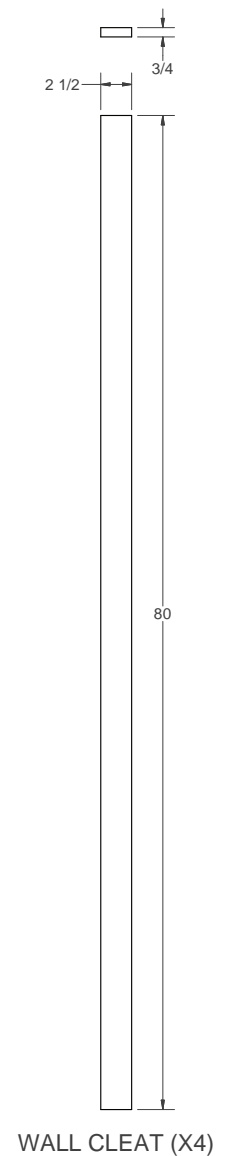

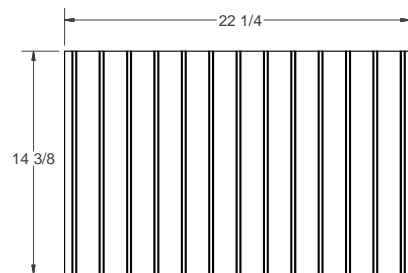


TOP INSIDE PANEL (X2)

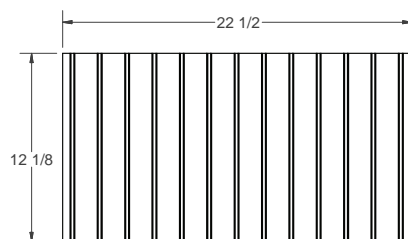


TOP INSIDE LOWER PANEL(X2)

NOTE:  
ALL MATERIAL  
APPROX. 5/16" PAINT  
GRADE BEADBOARD  
PANEL.

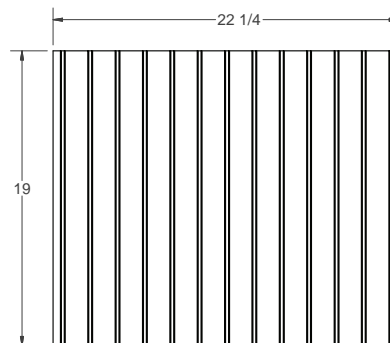

MIDDLE INSIDE PANEL (X2)

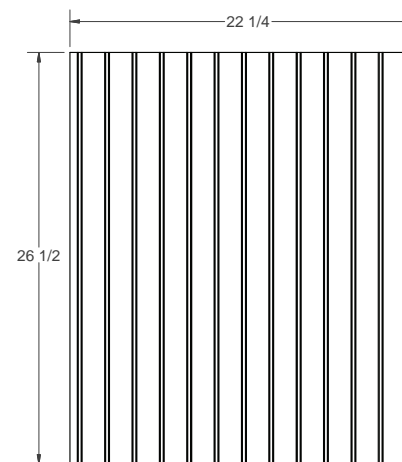

BOTTOM INSIDE PANEL (X2)

# GET A FREE ISSUE AND A FREE BOOK

## Look at what you'll get...

- Free Preview of Workbench Magazine
- Free Storage Solutions Book
- Time and Money-Saving **Tips**
- Projects with **Step-by-Step** How-to's
- Your Home Improvement **Questions Answered**
- **Practical ideas** to Add Style & Value to Your Home
- Tools and Product **Advice**



[www.WorkbenchMagazine.com](http://www.WorkbenchMagazine.com)



Offer subject to change